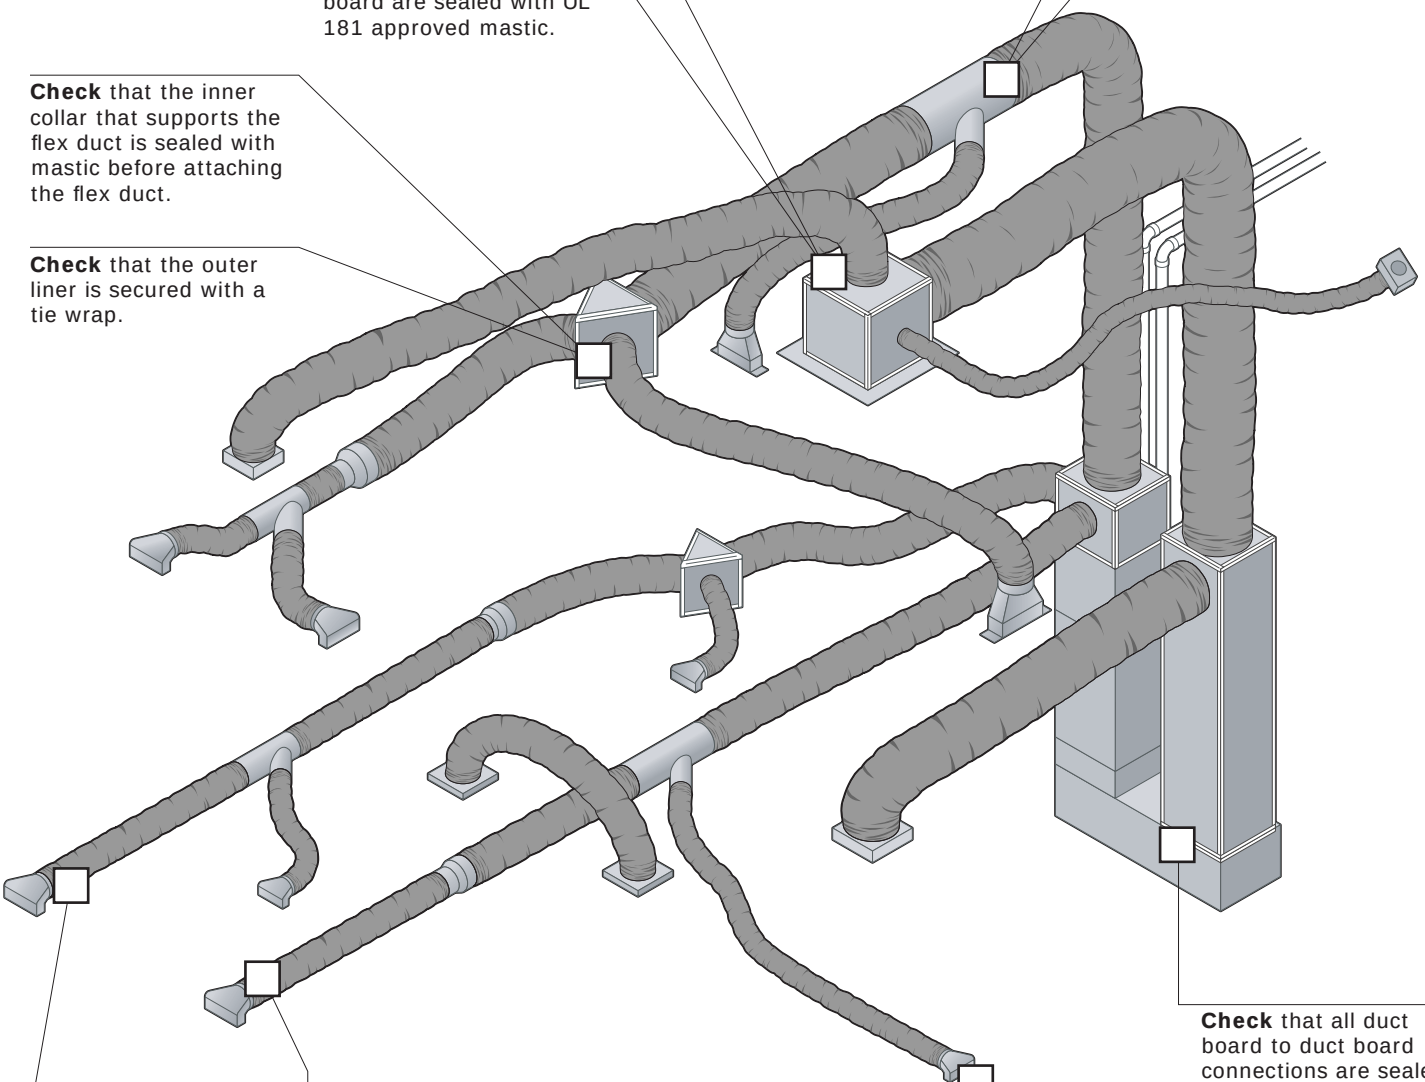

Check that the inner liner is sealed to the y-fitting with UL 181 approved mastic.

Check that the inner liner is secured to the y-fitting with a tie wrap.

Check that all return boxes are sealed with UL 181 approved mastic.

Check that all metal collars connected to duct board are sealed with UL 181 approved mastic.

Check that the inner collar that supports the flex duct is sealed with mastic before attaching the flex duct.

Check that the outer liner is secured with a tie wrap.

Check that all duct board to duct board connections are sealed with UL 181 approved tape.

Check that all seams in supply boots are sealed with UL 181 approved mastic.

Check that the outer liner is sealed to the adjoining material with UL 181 approved tape.

Check that all supply boots are pulled away from the exterior wall to reduce duct length.

build IQ ©2007 BuildIQ